
ATRA MASTER M-100 ASSEMBLY AND PARTS LIST

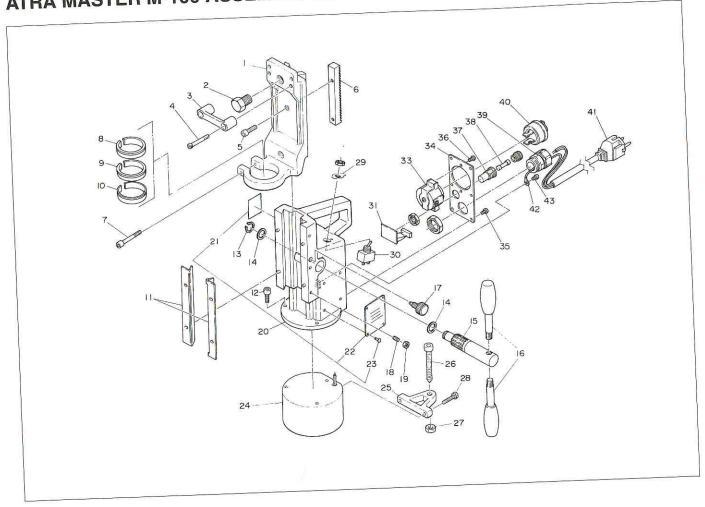

The part numbers with () are included in the Ass'y parts written above them.

	Part No.	Part Name	Q'ty	Price
No.	TQ00371	Slide Board	1	
1	TP15299	Hex. Head Bolt 16×25	1	
#2	TP17046	Drill Unit Retaining Fixture	1	
3	TP04073	Hex. Socket Head Screw 6×35	2	
#4	TP15270	Hex. Socket Head Screw 6×22	2	
# 5	TP15270	Back	1	
6	TP05469	Hex. Socket Head Screw 6×45	1	
ж7	TP15103	Slide Plate	2	
11	TP05474	Hex. Socket Head Screw 6×14	3	
#12	TP02539	Shaft Retaining Ring G-14	1	
*13	TP05463	Pinion Washer 14.2×19×1	2	
14	TP05461	Pinion Shaft	1	
15	TP05478	Rod Handle	2	
16	TP02931	Set Screw	1	
17	TP02931	Hex. Socket Head Set Screw	3	
#18	TP02936	Hex. Nut M5	3	
#19	TB03162	Body Sub Ass'y	1	
20	TQ03417	Warning Plate	1	
22	TQ04071	Specification Plate	1	
*23	(TP05136)	100//10	4	
24	TB03160	Magnet Ass'y	1 set	
25	TQ03686		1	
26			1	
±27			1	

	David No.	Part Name	Q'ty	Price
No.	Part No.	Hex. Socket Head Screw 6×25	2	
28	TQ03340		1	
29	TP00076	Switch Plate	-	
:30	TQ00334	Switch ET11QA12		
31	TB00881	Print Board Ass'y	1 set	
±33	TP00151	Receptacle	_ 1	
	TP15298	Circuit Board	1	
34	TP02618	Pan Head Screw 4×8	4	
#35	TP02018	Pan Head Screw 3×12	2	
#36	And Annual Control	Fuse Holder	1	1
*37	TP02622		1	
#38	TP00147	Fuse 2A	1	
#39	TQ05444	Cable Connector SC4-1	- 100	+
#40	TP00152	Plug	1	1
41	TB01132	Power Cord Ass'y	1	-
#42	TP15874	Insulated Crimp Contact FV1.25-4	2	
#42 #43	LP08489	Binding Head Screw 4×6	1	

ACCESSORIES

	TP16141	Instruction Manual	1	_
-	TP04004	Hex. Wrench Key 5	1	
#		Hex. Wrench Key 2.5	1	
18	TP04305 TP14091	Spanner 7×8	1	
#		Drill Unit Retaining Bush A	1	
8	TP05483	Drill Unit Retaining Bush B	1	
9	TP05484	Drill Unit Retaining Bush C	1	
10	TP05485	Drill Offic Netaming Basin		

^{*}When ordering spare parts, please state the description and part number of the spare part (not the Ref. No.) as well as the model.