


# JET CHISEL EJC-32A AC110V~120V 60Hz ASSEMBLY AND PARTS LIST

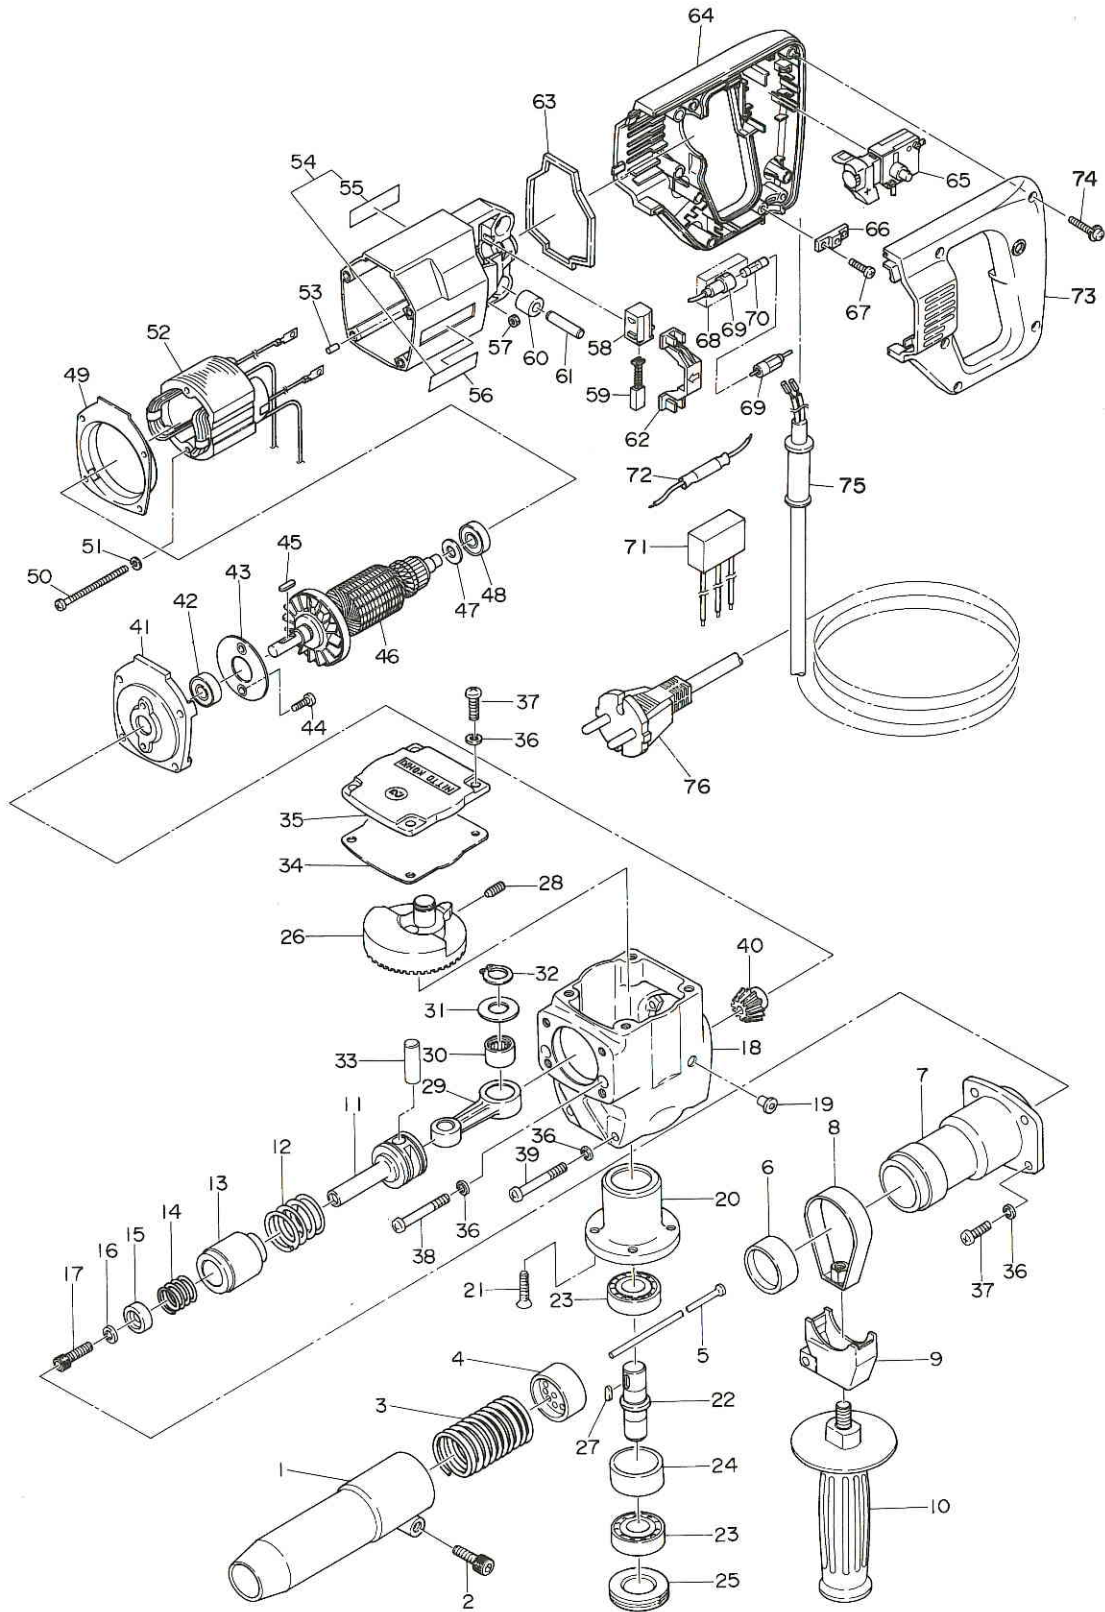

The parts numbers with ( ) are included in the Ass'y parts written above them. (110V~120V)

No.	Part No.	Part Name	Q'ty	Price
1	TA99980	Anvil Guide Sub Ass'y	1 set	
2	TP00045	Hex. Socket Cap Screw 8×25	1	
3	TP16300	Spring 3.2×32.3×60	1	
4	TP16301	Needle Supporter 3φ	1	
5	TP00341	Needle 3φ×180	15	
6	TP16302	Throttle Anvil	1	
7	TA99947	Cylinder Ass'y	1 set	
8	TP16351	Handle Holder	1	
9	TP16352	Holder Cover	1	
10	TP16350	Side Handle	1	
11	TP16339	Piston	1	
12	TP16340	Spring 5×26×28.5	1	
13	TP16341	Hammer	1	
14	TP16342	Spring 3.8×15.9×17.5	1	
15	TP16343	Stopper	1	
16	TP00629	Spring Washer M6	1	
17	TP06217	Hex. Socket Cap Screw 6×25	1	
18	TP16335	Crank Case	1	
19	TP04104	Oil Cup	1	
20	TP16336	Bearing Case	1	
21	TP00133	Cross Recessed Countersunk Screw 5×30	4	
22	TP16337	Spindle	1	
23	TP01609	Ball Bearing 6202ZZ	2	
24	TP16338	Spacer 29.1×34.9×16	1	
25	TP16334	Bearing Set Screw	1	
26	TP16332	Gear	1	
27	TP09933	Sunk Key 4×4×12 Double-Rounded	1	
28	TP16333	Hex. Socket Set Screw 5×14 with Cone Point	1	
29	TP16358	Crank Rod	1	
30	TP16359	Needle Bearing	1	
31	TP16304	Thrust Washer	1	
32	TP02539	Retaining Ring G-14	1	
33	TP16303	Long Cylindrical Roller 10×31.6	1	
34	TP16305	Gasket	1	
35	TP16306	Cap	1	
36	TP00513	Spring Washer M5	12	
37	TP00511	Cross Recessed Pan Head Screw 5×15	8	
38	TQ02655	Cross Recessed Pan Head Tapping Screw 5×40	2	
39	TQ02656	Cross Recessed Pan Head Tapping Screw 5×100	2	
40	TP16309	Pinion	1	
41	TQ03268	Bearing Bracket	1	
42	TP06242	Ball Bearing 629ZZ	1	
43	TQ03269	Bearing Retainer	1	
44	TP04235	Cross Recessed Pan Head Screw 4×8	2	
45	TP10107	Sunk Key 3×3×8 Double-Rounded	1	
46	TB02530	Armature Sub Ass'y	1 set	
47	TQ03270	Washer	1	
48	TP16274	Ball Bearing 608VV	1	
49	TQ03289	Fan Guide	1	
50	TQ03271	Cross Recessed Pan Head Screw 4×60	2	

No.	Part No.	Part Name	Q'ty	Price
51	TP04234	Spring Washer M4	2	
52	TB02531	Stator Sub Ass'y	1 set	
53	TQ03272	Rubber Plug	1	
54	TB02528	Frame Ass'y	1 set	
55	(TQ03158)	Specification Name Plate	1	
56	(TP16357)	Nitto Label	1	
57	LP30233	Hex. Nut M4	2	
58	TQ03273	Brush Holder	2	
59	TB02515	Carbon Brush Ass'y	1 set	
60	TQ03275	Absorbing Rubber(B)	2	
61	TQ03276	Core Rod	2	
62	TQ03277	Brush Holder Retainer	2	
63	TQ03278	Absorbing Rubber(A)	1	
64	TQ03279	Switch Handle(B)	1	
65	TQ03280	Switch	1	
66	TQ03281	Cord Clamp	1	
67	TQ03282	⊕Screw YPF 4×14	2	
68	TP16321	Sponge	1	
69	TQ03287	Fuse Holder	1	
70	TQ03283	Fuse 5A	1	
71	TQ03284	Switch Handle(A)	1	
72	TQ03285	⊕Screw YPF 4×20	5	
73	TQ03286	Strain Reliever	1	
74	TB02513	Cabtyre Cord Ass'y	1 set	

#### ACCESSORIES

	TP00170	Hex. Socket Screw Key 6	1	
	TP00341	Needle 3φ×180	15	
	TQ02916	Instruction Manual	1	